


## INSTALLATION DIRECTIONS:

*Begin the installation by following Shaw's Installation Guidelines for Site Conditions and proper Floor Preparation.*

- ❶ The starting point in a modular installation must be as near to the center of the room as possible and must be positioned to utilize the largest perimeter cut module size.
- ❷ Snap a chalk line parallel to one major wall bisecting the starting point. It may be necessary to offset the center chalk line to assure perimeter modules will be at least half size.
- ❸ A second chalk line must be snapped from the starting point at 90° to the first line.
- ❹ Test a dry-install of one section for pattern layout and placement.
- ❺ Starting in one quadrant, place tiles in the monolithic pattern illustrated by the numbers above.
- ❻ Flow into the opposite quadrant, continuing the monolithic pattern.

*Directional arrows are featured on the back of the tile. Numbers within the arrows are for manufacturing purposes and are not related to installation.*

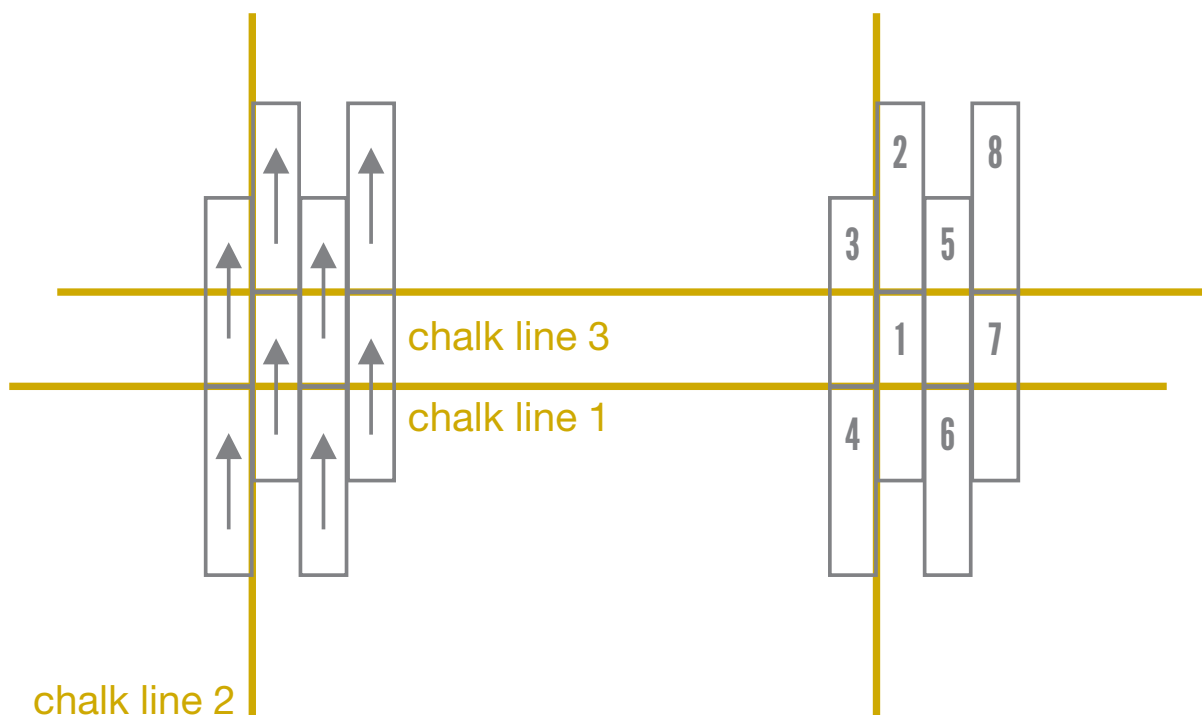


## INSTALLATION DIRECTIONS:

*Begin the installation by following Shaw's Installation Guidelines for Site Conditions and proper Floor Preparation.*

- 1 The starting point in a modular installation must be as near to the center of the room as possible and must be positioned to utilize the largest perimeter cut module size.
- 2 Snap a chalk line parallel to one major wall bisecting the starting point. It may be necessary to offset the center chalk line to assure perimeter modules will be at least half size.
- 3 A second chalk line must be snapped from the starting point at 90° to the first line and a third chalk line must be snapped at 18" apart from the first chalk line.
- 4 Test a dry-install of one section for pattern layout and placement.
- 5 Starting in one quadrant, place tiles in the ashlar pattern illustrated by the numbers above.
- 6 Flow into the opposite quadrant, continuing the ashlar pattern.

*Directional arrows are featured on the back of the tile. Numbers within the arrows are for manufacturing purposes and are not related to installation.*

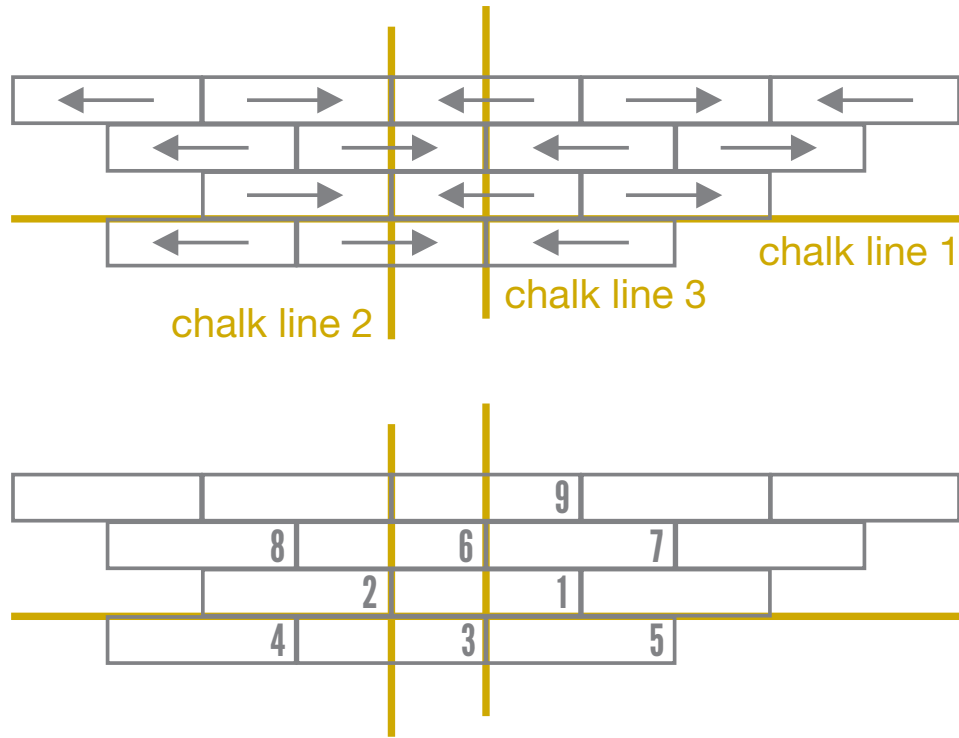

## INSTALLATION DIRECTIONS:


Begin the installation by following Shaw's Installation Guidelines for Site Conditions and proper Floor Preparation.

- 1 The starting point in a modular installation must be as near to the center of the room as possible and must be positioned to utilize the largest perimeter cut module size.
- 2 Snap a chalk line parallel to one major wall bisecting the starting point. It may be necessary to offset the center chalk line to assure perimeter modules will be at least half size.
- 3 A second chalk line must be snapped from the starting point at 90° to the first line and a third chalk line must be snapped at 18" apart from the second chalk line.
- 4 Test a dry-install of one section for pattern layout and placement.
- 5 Starting in one quadrant, stagger tiles in the brick pattern illustrated by the numbers above.
- 6 Flow into the adjacent quadrants, keeping arrows facing each other in pairs.

*Directional arrows are featured on the back of the tile. Numbers within the arrows are for manufacturing purposes and are not related to installation.*

# HERRINGBONE

9X36

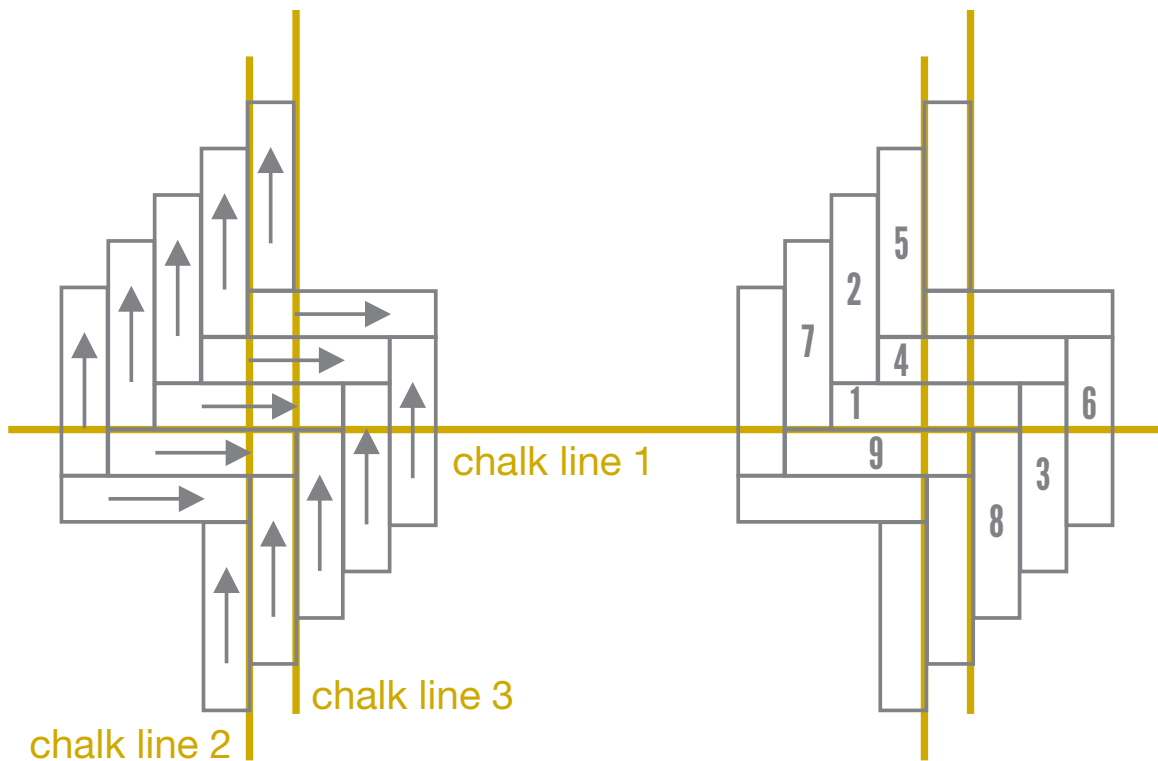

## INSTALLATION DIRECTIONS:

Begin the installation by following Shaw's Installation Guidelines for Site Conditions and proper Floor Preparation.

- 1 The starting point in a modular installation must be as near to the center of the room as possible and must be positioned to utilize the largest perimeter cut module size.
- 2 Snap a chalk line parallel to one major wall bisecting the starting point. It may be necessary to offset the center chalk line to assure perimeter modules will be at least half size.
- 3 A second chalk line must be snapped from the starting point at 90° to the first line and a third chalk line must be snapped at 9" apart from the second chalk line.
- 4 Test a dry-install of one section for pattern layout and placement.
- 5 Starting in one quadrant, place tiles in the herringbone pattern illustrated by the numbers above.
- 6 Flow into the opposite quadrant, continuing the herringbone pattern.

*Directional arrows are featured on the back of the tile. Numbers within the arrows are for manufacturing purposes and are not related to installation.*

**shaw** contract group®

For more information on installing 9X36 tiles, visit [shawcontractgroup.com](http://shawcontractgroup.com) or call 877.502.SHAW. 011515DS